

## FAQ How to upgrade C30 camera firmware?

### Prerequisites:


**Hardware:** C30 oblique camera, computer

**Software:** None


### Steps:

- Users can download C30 camera firmware via below links.  
[https://chcnavigation.jianguoyun.com/p/DRqTyl4Qtq\\_UCxjW3JgFIAA](https://chcnavigation.jianguoyun.com/p/DRqTyl4Qtq_UCxjW3JgFIAA) (C30 host firmware)  
[https://chcnavigation.jianguoyun.com/p/Da1lyngQtq\\_UCxjl3JgFIAA](https://chcnavigation.jianguoyun.com/p/Da1lyngQtq_UCxjl3JgFIAA)(C30 lens firmware)


- Delete original 'update' folder in CAM\_SYS disk.(If there is no 'update' inside do not need to delete). Then copy the C30 host firmware ' update' folder to CAM\_SYS disk root directory.

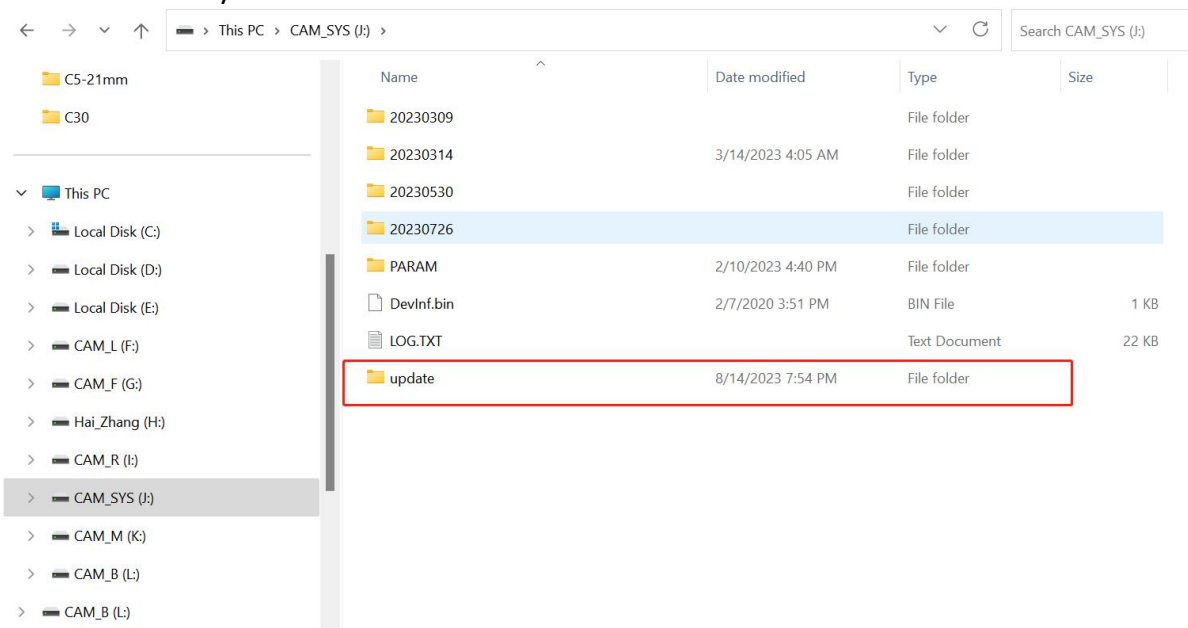

- Power on C30 camera in an open air, camera will beep once. After that C30 camera will beep for a long time, which means camera start to upgrade firmware. Finally, C30 camera will beep three times and the LED light status will change from slow flashing to quick flashing, it means C30 host firmware upgrade is successful.
- Delete original firmware in CAM\_L、CAM\_R、CAM\_M、CAM\_F、CAM\_B disks. (If there is no firmware inside do not need to delete). Copy the C30 lens firmware [upgrade\\_s26f25\\_0\\_V1.01.066.sw](#) to CAM\_M disk root directory, copy C30 lens firmware [upgrade\\_s26f35\\_0\\_V1.01.066.sw](#) to CAM\_L、CAM\_R、CAM\_F、CAM\_B disks root directory.

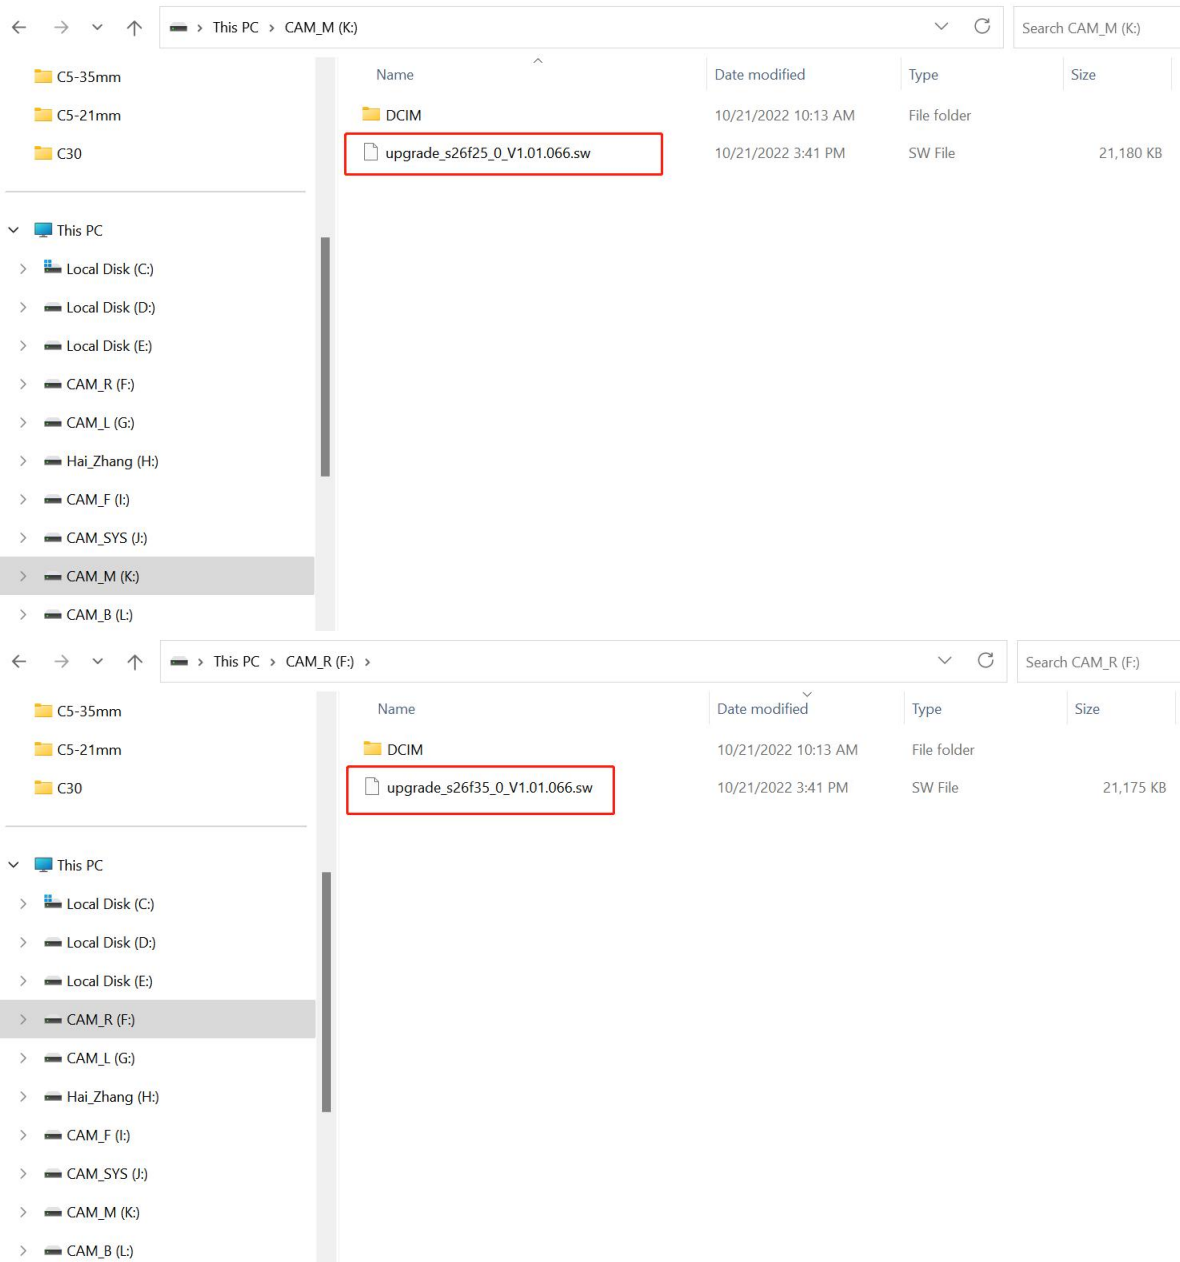

 5. Power on C30 camera in an open air, wait for 3minutes, let camera take some photos on the ground. Power off the system, check captured image firmware version. If image firmware version is same with firmware version, it means camera firmware version was upgraded successfully.

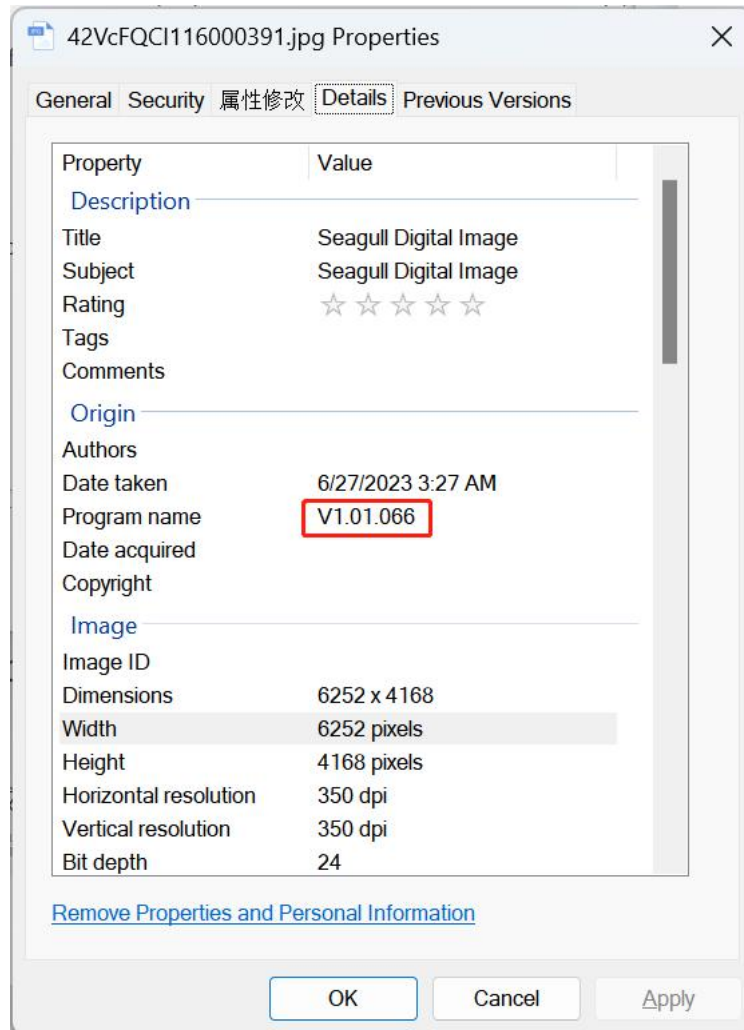

**CHC Navigation**

Building C, NO. 577 Songying Road, Qingpu District,  
201703 Shanghai, China

Tel: +86 21 542 60 273 | Fax: +86 21 649 50 963

Email: [sales@chcnav.com](mailto:sales@chcnav.com) | [support@chcnav.com](mailto:support@chcnav.com) Skype:

[chcnav\\_support](#)

Website: [www.chcnav.com](http://www.chcnav.com)